




## WIRING DIAGRAM FOR D.P.S.T. MASTER DISCONNECT

SWITCHES FOR USE WITH ALTERNATOR OR GENERATOR SYSTEMS.

HEX NUTS AGAINST BASE MUST REMAIN STATIONARY, MUST NOT BE TIGHTENED OR LOOSENED. SECURE POWER CABLES TO MOUNTING SURFACE NO GREATER THAN 25cm (10") FROM SWITCH MOUNTING TO REMOVE STRAIN FROM STUDS.

For part no's 61070, 61075 & 61074^

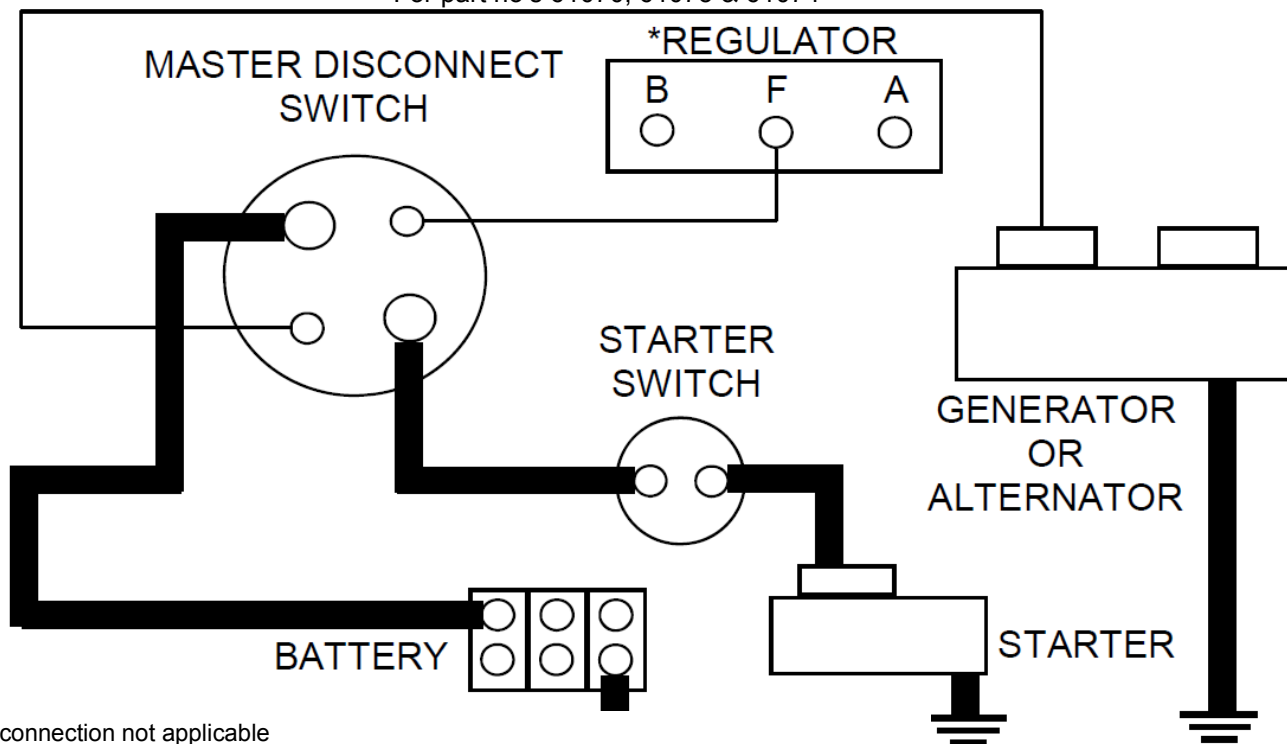

^ Regulator connection not applicable

\*Consult vehicle service manual for proper hookup to regulator.

Distributed by Brown & Watson International Pty. Ltd. Knoxfield Victoria 3180 Australia

IS051  
Issue 2 10.5.12




## WIRING DIAGRAM FOR D.P.S.T. MASTER DISCONNECT

SWITCHES FOR USE WITH ALTERNATOR OR GENERATOR SYSTEMS.

HEX NUTS AGAINST BASE MUST REMAIN STATIONARY, MUST NOT BE TIGHTENED OR LOOSENED. SECURE POWER CABLES TO MOUNTING SURFACE NO GREATER THAN 25cm (10") FROM SWITCH MOUNTING TO REMOVE STRAIN FROM STUDS.

For part no's 61070, 61075 & 61074^

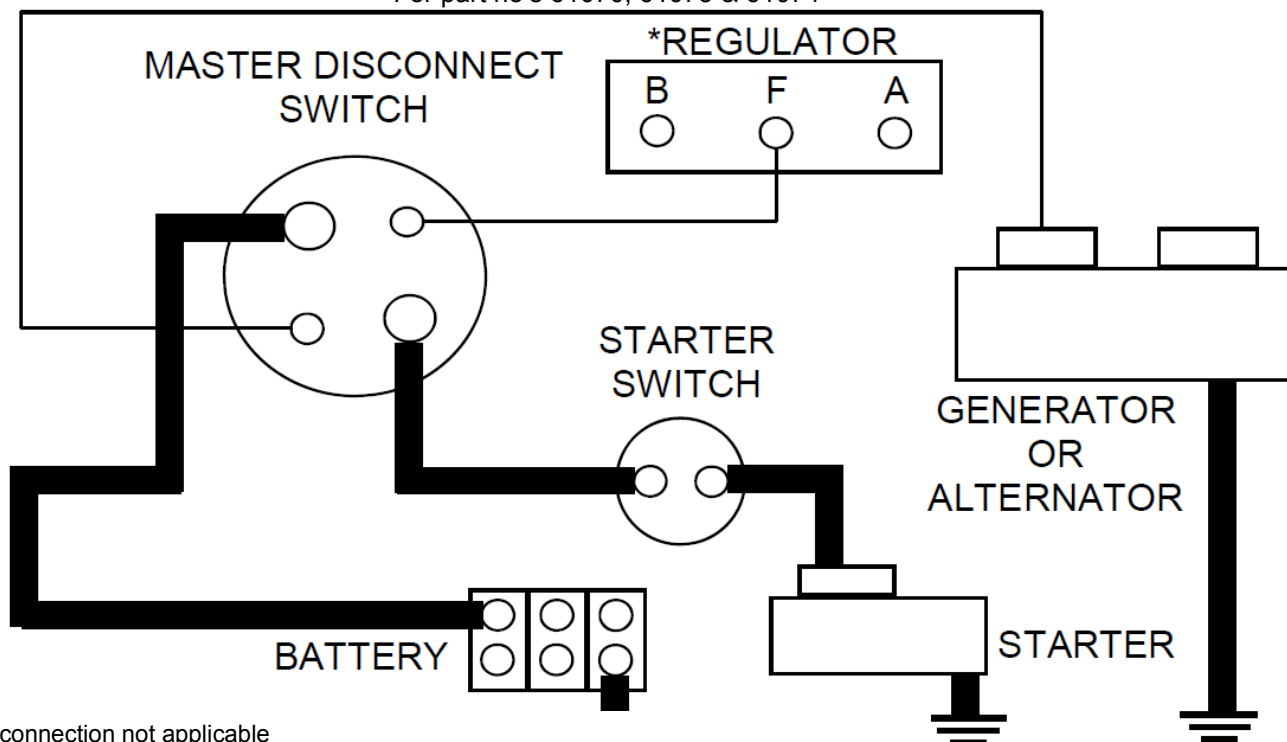

^ Regulator connection not applicable

\*Consult vehicle service manual for proper hookup to regulator.

Distributed by Brown & Watson International Pty. Ltd. Knoxfield Victoria 3180 Australia

IS051  
Issue 2 10.5.12