


## INSTRUCTION SHEET

P/No. P/No. 85208A, 85208AW, 85208RB

# SELF CONTAINED L.E.D WARNING LIGHTS

## SURFACE MOUNT

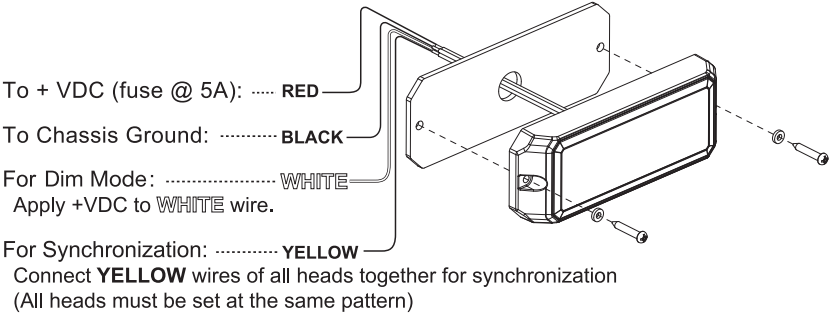

For Flash Modes:

1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Flash mode.
2. Remove **YELLOW** wire from +VDC and momentarily apply to +VDC to change Modes (see Flash Modes chart):
  - Flash once = (Phase1)      • Flash twice = (Phase2)
  - Heads in the same Phase flash together.
  - (Phase1) Heads alternate with (Phase2) Heads.

Flash Modes	
1	Top-Down (Phase1)
2	Top-Down (Phase2)
3	Left-Right (Phase1)
4	Left-Right (Phase2)
5	Criss-Cross (Phase1)
6	Criss-Cross (Phase2)

For Flash Pattern, momentarily apply +VDC to **YELLOW** wire:

- once for next pattern
- quickly three times for reset

**NOTE:** This unit may not be factory set at FP#1.

Flash Patterns			
1	Double (R65)	14	Single (all)
2	Single (2Hz)	15	Double (all)
3	Triple (2Hz)	16	Quad (all)
4	Quad (2Hz)	17	Quint (all)
5	Random	18	Mega (all)
6	Single (split)	19	Ultra (all)
7	Double (split)	20	Single-Quad (all)
8	Quad (split)	21	Single H/L (all)
9	Quint (split)	22	Steady 2 (california)
10	Mega (split)	23	Steady 4 (all)
11	Ultra (split)	24	Rotate Slow
12	Single-Quad (split)	25	Rotate Fast
13	Single H/L (split)		