

# **SENTRY MICRO**

## L.E.D. STROBE

Part No. 85324A



#### **FUNCTION BUTTON INSTRUCTIONS**

#### 1. Charge Indicator

When the indicator is **Red**, the product is charging When the indicator is **Green**, the product is finished charging

#### 2. Power Indicator

Steady On (Enough power)

Double flash (using half of the power)

Quick flash (the battery is low, please charge it asap)

### 3. ON-MODE-OFF button

- (1) ON
- (2) Rotation mode
- (3) SOS mode
- (4) Steady On
- (5) OFF

#### **NOTES**

(Pressing ON/OFF for 3 seconds will change to ECE R65 mode, press for one (1) second to go back to normal mode. This reduces run time to two (2) hours.

Charge via supplied USB lead only.

DO NOT attempt to replace the battery.

IS459 Issue 1 11.11.19