



# NARVA®

## MODEL 16 SCREW CAP FITTING INSTRUCTIONS


The model 16 licence plate housing are now supplied with screw caps for fitment after the lamp is secured to the vehicle

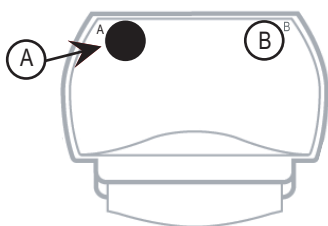

Caps are to be fitted in direction of the slot only. Cap A aligned with letter A, and cap B aligned with the letter B.

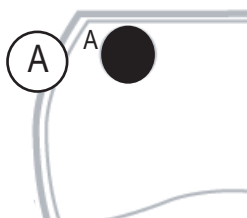

Clip both screw caps until flush with licence plate surface.

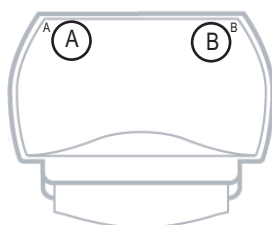


IS008

P.T.O for dimensions


# NARVA®

## MODEL 16 SCREW CAP FITTING INSTRUCTIONS


The model 16 licence plate housing are now supplied with screw caps for fitment after the lamp is secured to the vehicle

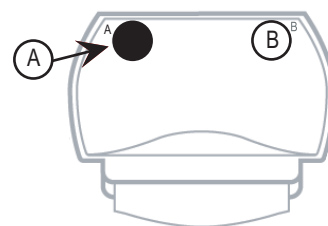

Caps are to be fitted in direction of the slot only. Cap A aligned with letter A, and cap B aligned with the letter B.

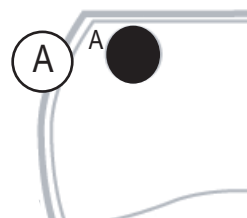

Clip both screw caps until flush with licence plate surface.

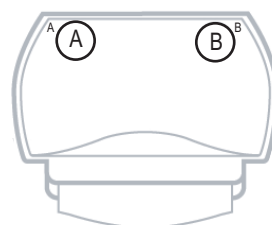


IS008

P.T.O for dimensions


# NARVA®

## MODEL 16 SCREW CAP FITTING INSTRUCTIONS


The model 16 licence plate housing are now supplied with screw caps for fitment after the lamp is secured to the vehicle

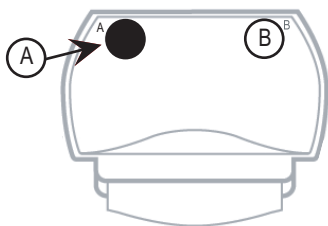

Caps are to be fitted in direction of the slot only. Cap A aligned with letter A, and cap B aligned with the letter B.

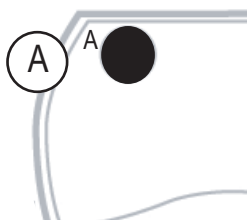

Clip both screw caps until flush with licence plate surface.

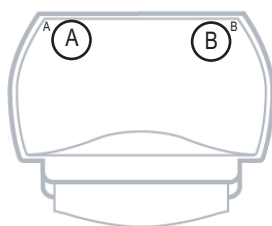


IS008

P.T.O for dimensions


# NARVA®

## MODEL 16 SCREW CAP FITTING INSTRUCTIONS


The model 16 licence plate housing are now supplied with screw caps for fitment after the lamp is secured to the vehicle

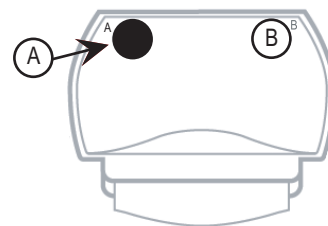

Caps are to be fitted in direction of the slot only. Cap A aligned with letter A, and cap B aligned with the letter B.

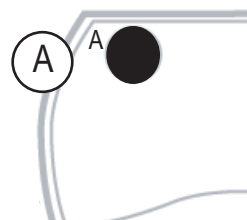


Clip both screw caps until flush with licence plate surface.

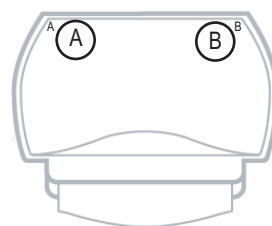


IS008


P.T.O for dimensions

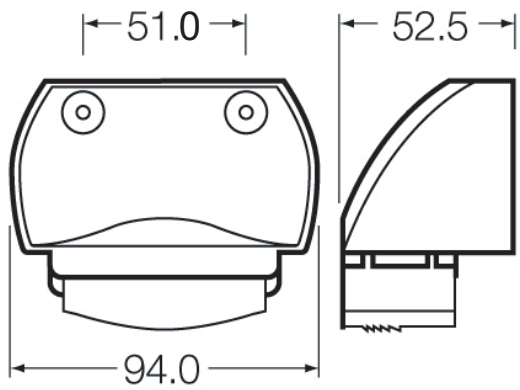


4.5 screw hole diameter

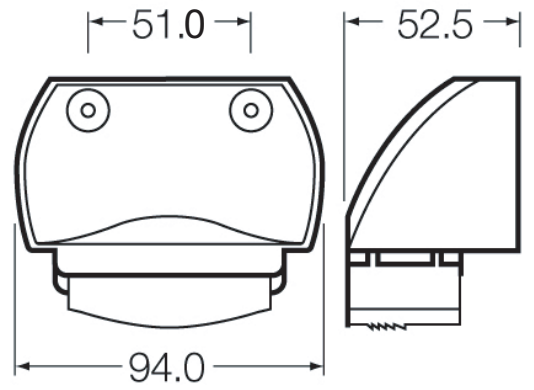

4.5 screw hole diameter

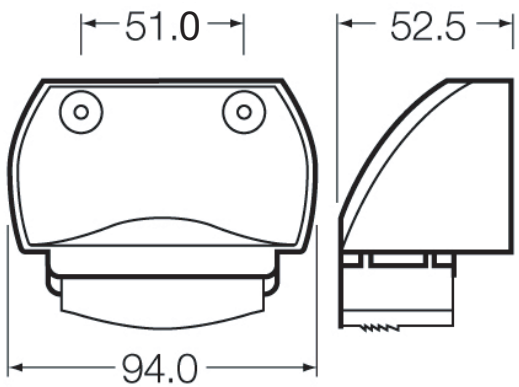

4.5 screw hole diameter

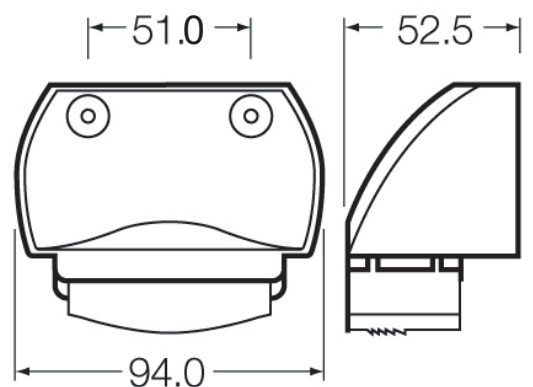

4.5 screw hole diameter